Service Manual Pump Models: Series Q Pumps

Preventative Maintenance

Inspection & Routine Adjustment

	Stocked Pumps: Once Every 30 days	Initial Startup	Before & After long out-of-service periods	10 operating hours after initial startup	20 operating hours after initial startup	Every 200 operating hours	Every 500 operating hours or 3 months	Every 2000 operating hours	After Exposure to strong contamination
New Pump w/Mechanical Seal combination of metals: SiC-Si/TC. One Rotation when not in service	x								
Remove plastic plug from breather on V100 QHD Pumps.		X							
Check belt tension for belt drive pumps according to specification for all pumps configured with V-Belt Drives				x				x	
Tighten all mounting bolts					Х				
Check buffer chamber oil level					Х	Х			
Change buffer chamber oil								Х	Х
Change Gear Oil				Х				X	
Check Gear Oil Level							X		

Man Hours Required for Preventative & Routine Maintenance

All Q Series Pumps – Time in Hours								
Title	Electrician	Mechanic	Operator	Laborer				
Lobe Change	1.0	2.0						
Seal Change	1.0	2.5						
Wear Plate Change	1.0	1.5						
Housing Adjustment	1.0	2.5						
Complete Wet-End Rebuild (all of the above tasks)	1.0	4.0						
Check Oils		.25						
Change Oils		.75						

Number of Personnel Required for Preventative & Routine Maintenance

All Q Series Pumps – Time in Man Hours								
Title	Electrician	Mechanic	Operator	Laborer				
Check Oils		.25						
Change Oils		.75						

Service Manual Pump Models: Series Q Pumps

Frequency of Preventative & Routine Maintenance

	Stocked Pumps: Once Every 30 days	Initial Startup	Before & After long out-of-service periods	10 operating hours after initial startup	20 operating hours after initial startup	Every 200 operating hours	Every 500 operating hours or 3 months	Every 2000 operating hours	After Exposure to strong contamination
New Pump w/Mechanical Seal combination of metals: SiC-Si/TC. One Rotation when not in service	x								
Tighten all mounting bolts					Х				
Check buffer chamber oil level					Х	Х			
Change buffer chamber oil								Х	Х
Change Gear Oil				X				X	
Check Gear Oil Level							Х		